


One-Click® Cleaner HOC Instruction Manual

Thank you for choosing the **One-Click® Cleaner HOC**. The **One-Click® Cleaner HOC** is a high-performance device designed for cleaning the ferrule end face of 2.5mm based Hardened Fiber Optic Connector(HFOC). Please carefully read this instruction manual before using this device.

1. Safety precautions

	Though our device is deemed safe, improper usage or handling can still inflict injury to others.
	One-Click® Cleaner HOC is designed to clean TITAN RTD® /TRIDENT® Hardened Fiber Optic connector(HFOC) and SC Connector. Fujikura Ltd. is not liable for damage caused in attempt to apply this device to other applications.


2. Notes on usage

- Do not attempt to disassemble as this can cause damage to the device and void warranty.
- Do not re-use cleaning cloth as this will eliminate its cleaning ability.
- Do not touch the cleaning cloth as this will cause contamination.
- Do not pull the cleaning cloth, use only the device body.
- Do not use this cleaner when the cloth is empty, as this can cause damage to the connector.

3. Notes on storage for extended periods

- Do not expose device to direct sunlight, high temperature or high humidity.
- The cover on the dust cap should be closed at all times when device is not in use

4. Device construction

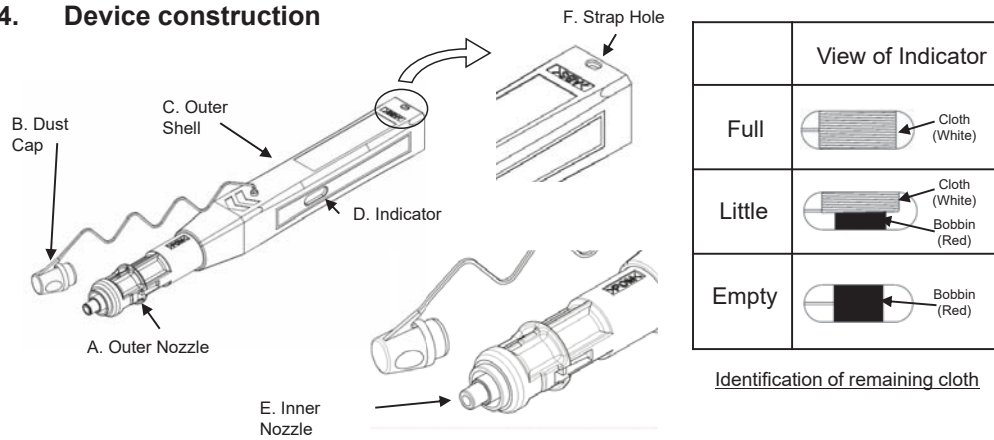

No.	Part Name	Function
A	Outer Nozzle	Aligns the cleaning cloth to the connector end face when cleaning through the connector adapter.
B	Dust Cap	Acts as the cap
C	Outer Shell	Houses cleaning cloth and pushed forward to clean the connector.
D	Indicator	Provides indication of remaining cleaning cloth.
E	Inner Nozzle	Aligns the cleaning cloth to the connector end face when cleaning the connector plug.
F	Strap Hole	Can be used to attach a strap to the cleaner (strap not included).


One-Click® is trade mark of Fujikura.Ltd
TITAN RTD ®/TRIDENT® is a trade mark of AFL

5. Applications


<Connector inside adapter>

<Connector plugs alone>


1. Remove dust cap from device

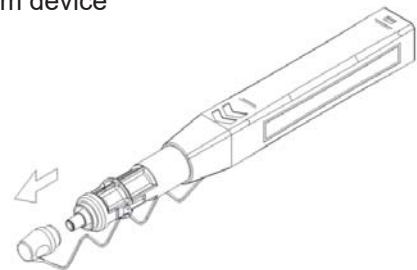


2. Insert the target connector adapter into the Guide Nozzle.

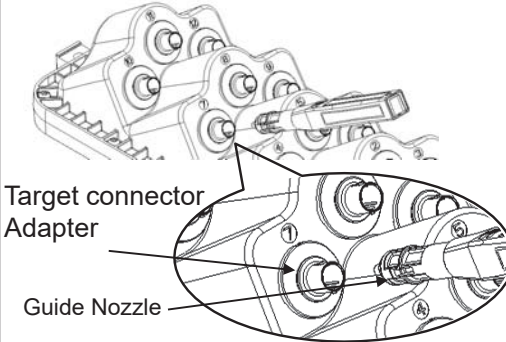


2. Insert the target connector into the Inner Nozzle.

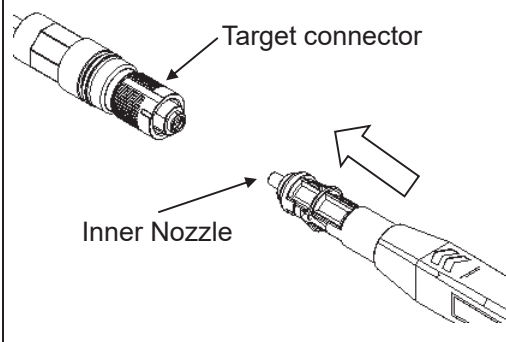

3. Push the Outer Shell to start cleaning the target connector end face. A "click" sound indicates end of cleaning process. Close the cover after use.

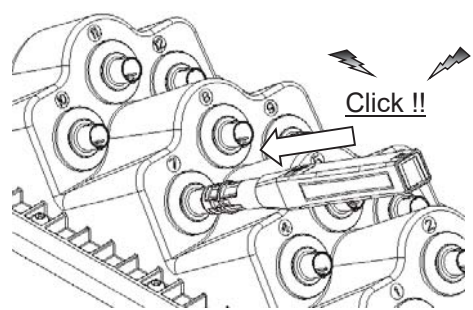

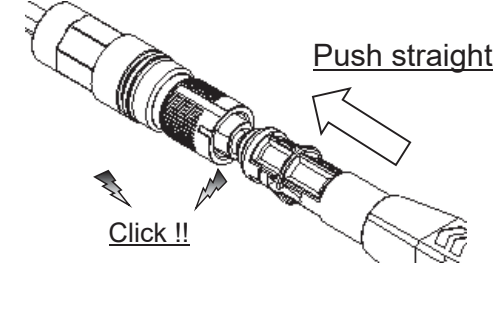

Push straight

Be careful not to slant the One-Click® Cleaner HOC while inserting into the Adapter / Connector. Do not overly exert force during insertion as this may cause damage to both the connector and the One-Click Cleaner® HOC.